

Dinex repair kit for 2KA063

Mounting Instructions

AFTERMARKET




All You Need From Turbo To Tailpipe



Measure first. Check that you have the end of the pipe in the same position as OE Compliant to Leading Standards.



Cut the old bellow as specified place showed on picture.

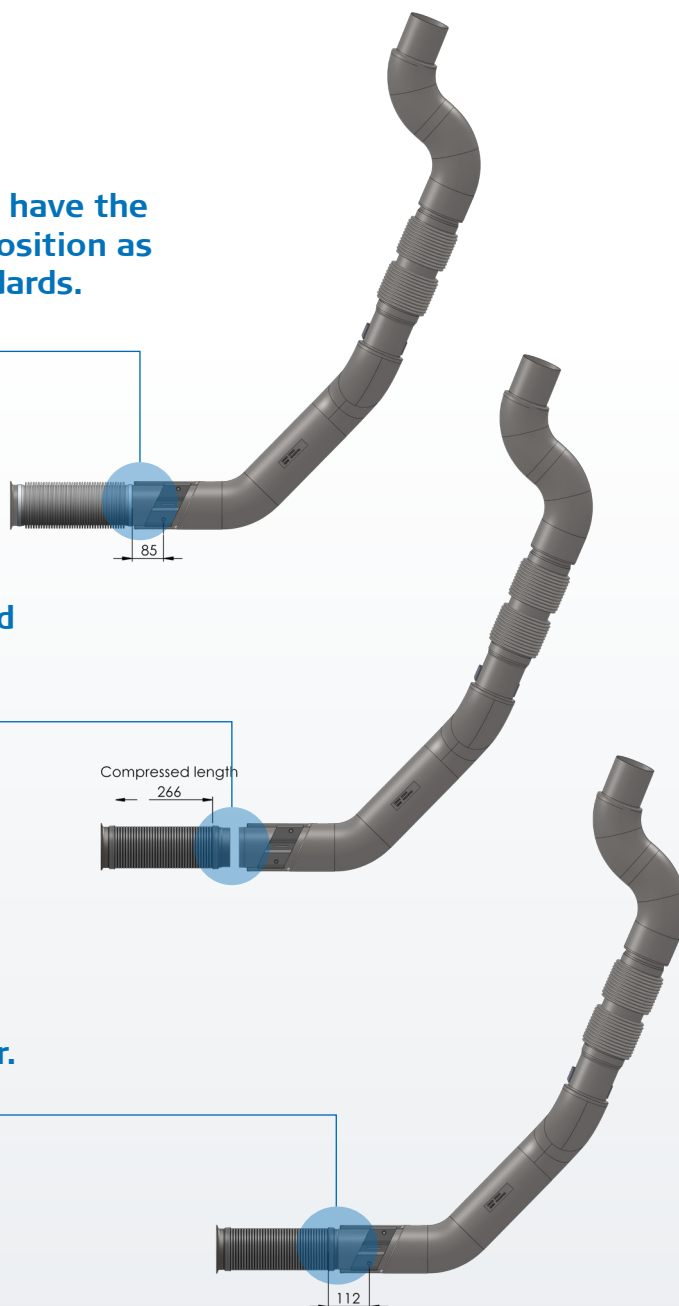

Finish the connection by welding two pipes together.



Find this and many more guides and manuals in the Downloads section of our homepage.